


Hoe stel ik auto tracking in op een PTZ camera

1 stel een preset in op het live scherm. Druk op het tandwiel-tje om de preset op te slaan.

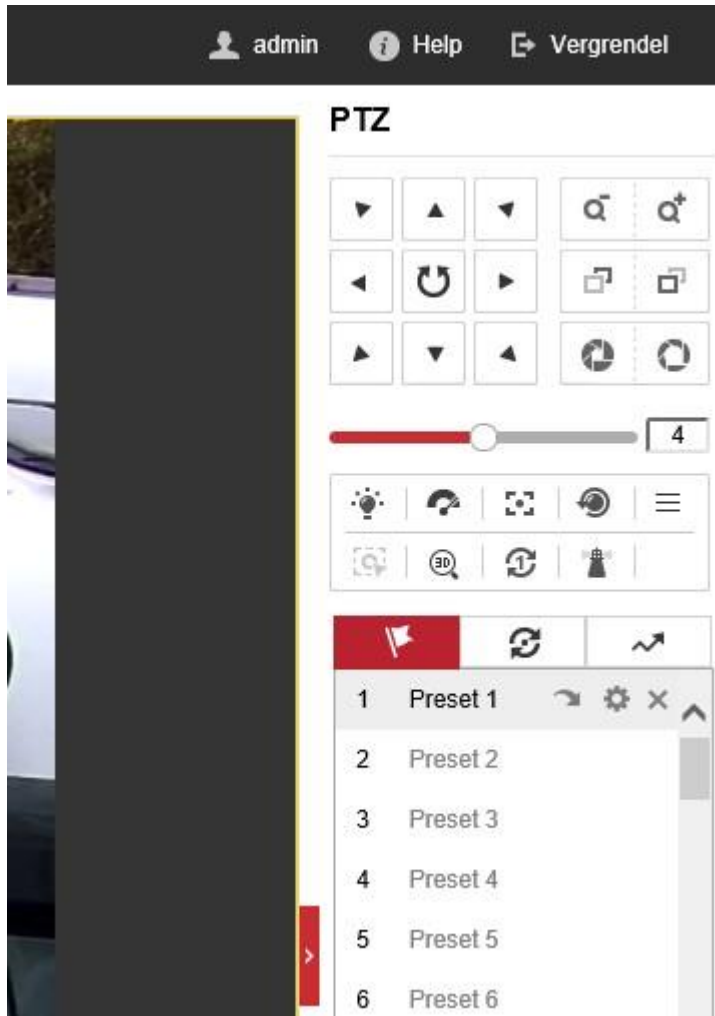

## 2 Teken een gebied waarin de autotracking geactiveerd moet worden.

**HIKVISION** Live View Playback Picture **Configuration**

Audio Exception Detection Face Detection **Intrusion Detection** Line Crossing Detection Region Entrance Detection Region Exiting Detection

Enable

Area Settings Arming Schedule Linkage Method

Region 1

Unlock(147s)

1 Preset 1  
2 Preset 2  
3 Preset 3  
4 Preset 4  
5 Preset 5  
6 Preset 6  
7 Preset 7  
8 Preset 8

Draw Area Clear

Threshold(s) 2

Sensitivity 88

Detection Target All

Save

## Zet een vinkje bij smart tracking

**HIKVISION** Live View Playback Picture **Configuration**

Audio Exception Detection Face Detection **Intrusion Detection** Line Crossing Detection Region Entrance Detection Region Exiting Detection

Enable

Area Settings Arming Schedule **Linkage Method**

Normal Linkage	Trigger Alarm Output	Trigger Recording
<input type="checkbox"/> Send Email <input checked="" type="checkbox"/> Notify Surveillance Center <input type="checkbox"/> Upload to FTP/Memory Card/... <input checked="" type="checkbox"/> Smart Tracking	<input type="checkbox"/> A->1 <input type="checkbox"/> A->2	<input checked="" type="checkbox"/> Trigger Recording <input checked="" type="checkbox"/> A1

Save