

Imou

AC1200 Dual-band Gigabit Wi-Fi Router

Quick Start Guide

V1.0.0

Package contents: Router x1, Power Adapter x1, Ethernet Cable x1, Quick Start Guide x2.

 
Connect the Device

Wireless connection


- 1 The network name (SSID) and wireless password are printed on the label at the bottom of the router.




Wired connection

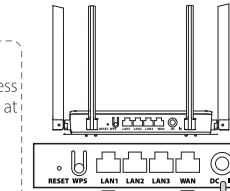

DSL/Modem/PON

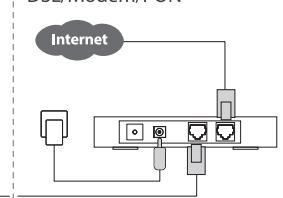 

Broadband Internet access

 

- Power off the modem, and remove the backup battery if it uses.
 - Make sure that the router is close to a power outlet and near Ethernet cables for wired computers.
 - Place the router horizontally and orient the antennas vertically.
- i** Images may differ from the actual product.

LED and Buttons

LED Patterns

LED Status	Device Status
Flashing green	WPS mode/Mesh networking
Solid green	Internet connected
Solid red	No Internet connection
Green & Red	Updating firmware
Off	Device is powered off
	LED is turned off

Reset Button

Press and hold the button for more than 5s to reset the router to its factory mode.

WPS Button

When the Mesh network is enabled, press the button for 1 s to start the Mesh process. When the Mesh network is disabled, press the button for 1 s to start the WPS process.

- i** Mesh networking is turned on by default. You can log in to the router management platform to disable it.


Set Up the Network

Method 1: Use a Web Browser

1. Connect your device to the router wirelessly or with an Ethernet cable.
 - i** The default Wi-Fi network name (SSID) is printed on the label at the bottom of the router.
 - For security, change to a unique SSID and assign a password.
2. Launch a web browser. Key in <http://imou-wifi.net> in the address bar. Read and accept the agreement and click Try Now.



3. Follow the on-screen instructions to set up the Internet connection.

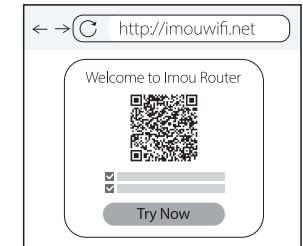

Method 2: Use the Imou Life App

1. Download the Imou Life App.




OR



2. Open the Imou Life App and log in.

i If you are a new user, please register an account first.

3. Add your devices. Follow the instructions on the app to complete the setup and connect to the internet.

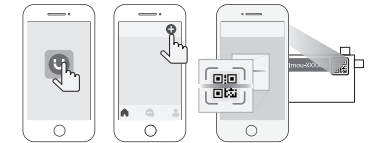

Mesh Network


This router supports mesh network.

A mesh network can be configured with one main router and multiple satellite nodes.

i The main router is the router you connect to the modem or the Internet access port.

Method 1: Via a Web Browser

Visit <http://imouwifi.net>, and log in with your ID and password. Click **Mesh Network** at the upper right corner and follow the step-by-step instructions to complete the setup.

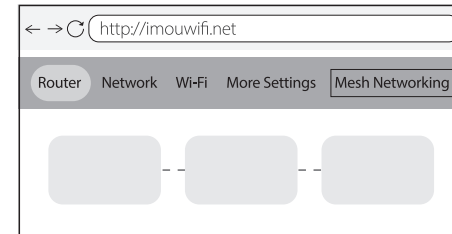

Method 2: Use the WPS Button

1. Plug in all routers and power them on.

i Position the satellite nodes and the main router within 3 meters (9.84 ft).

2. Press the WPS button on the main router. When the LED indicator starts flashing green, the router starts mesh connecting process.

3. Press the WPS button on the satellite nodes within 2 minutes, and ensure its indicator flashes green and red. When the mesh networking completes, the LED indicator of both the main router and satellite nodes will turn into solid status.

i • If you need to group multiple satellite nodes, please repeat step 2 and 3 for each of the nodes.
• Mesh networking support up to 4 satellite nodes.

FAQ

Q1: What should I do if I can't access the router's management page?

- Reboot your router and try again.
- Check your Wi-Fi connection.
- Use another Web browser such as Google Chrome.
- Restart your device.

Q2: What should I do if I can't access Internet?

- Reboot your modem and router, then try again.
- Check the Internet is working. With an Ethernet cable connecting the modem to the computer directly.

Q3: What should I do if I forget my Web management page password?

- Check the Web password on the label at the bottom of the router.
- When the router is power on, use a pin to press and hold the RESET button on the back until the LED blinks. Then the password will restore to the default that marked on the label.

Q4: What can I do if my Wi-Fi devices cannot connect over Wi-Fi to the router?

Please try to check:

- You have enabled the router's SSID network and it displays in your Wi-Fi client's scanning list.
- You have entered the correct Wi-Fi password when connecting your devices to the Wi-Fi network.

If you failed to address the problem, you can reset the router to factory default settings.



For the user guide, support, and more information, please visit <https://www.imoulife.com/support>

Email service.global@imoulife.com to give suggestions.

Follow @imougloba1 to get more brand information.