# Honeywell

2

## **Performance Series IP NVR Quick Networking Guide**

Document 800-16861V1 - Rev A - 07/2014



This guide shows how to set up your Performance Series IP NVR system for connecting with the Internet, and for using a PC, Smartphone, or Tablet computer.

Before you begin, ensure that you have

• A router and high-speed Internet access

• The NVR connected to a router or switch on your network, using an Ethernet cable. (See the Performance Series IP NVR Quick Connection Guide for instructions.)

1	Local Network Setup	

Configure the network setting as either Fixed IP or DHCP.





(2

Choose the DDNS option in Advanced Settings, by clicking Setting > Network> Network Setting >DDNS (double click).



			Por	Range		
Application	Star	t	End	Protocol	IP Address	Enabled
HTTP	80	to	80	Both 🕶	192.168.1. 108	V
TCP	37777	to	37777	Both •	192.168.1. 108	V
101	Jun		sun	Dour	102.100.1. 100	(AL
lap the TCF	port to be	e 3777	7.			

**Router Port Mapping Setup** 



..... -0-

3

(5)



Enter your domain name or IP address in the address field in a web browser.





## Honeywell

North America: +1 800 323 4576 www.honeywell.com/security Asia Pacific: +86 21 2219 6888 www.asia.security.honeywell.com Europe: +44 (0) 844 8000 235 www.honeywell.com/security/uk

Document 800-16861V1 - Rev A - 07/2014

Find the free app in Apple's App store (IOS) or the Google Play store (Android OS).





2 Tap Device Manager.





Enter your user information, then click Save.

•	🕬 🏹 📴 🍄 🕌 🗖 10:
Back	a Save
Name:	a
Address:	jason.hennvr-ddns.c
Port:	37777
Username:	admin
Password:	
Channel:	4

Tap to select a Live View



Tap to add channels.



#### **Tablet App Setup**

5

61

Install, then open, the HonView Touch HD Plus app for free from the App Store or Google Play store.



The Main window opens.





The Configuration window appears.



Tap the Menu icon in the Main window.



The Menu window appears.



 *	Configuration	Device Manager	Ad
ile -	Device Manager		Add
<u>9</u>	Channel Config	Device Manager	
<b>F</b>	Push Config		
	Local File		
	Relay out Config		
*	Favorites		
<b>\$</b>	Setting		
0	Help		

The New Device interface appears.



© 2014 Honeywell International Inc. All rights reserved. No part of this publication may be reproduced by any means without written permission from Honeywell. The information in this publication is believed to be accurate in all respects. However, Honeywell cannot assume responsibility for any consequences resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.

- 5 Enter the following in the New Device interface:
  - Name: Enter a name for your NVR.

Confi

\$ ?

- Address: Enter either your NVR's DDNS address or IP address.
- User Name: Enter the NVR's user name (default: admin).
- Password: Enter the NVR's password (default: 1234).

ation	Cancel		New Device	Save
lanager				Save
Config	Name:	test		
	Address:	test.hennvr-ddns		
nfig	Port:	37777		
	User Name:	admin		
Config	Password:			
	Channel amount:	16		
	Live Preview	Main Extra		
	Video Playback	Main Extra		
			Test	
			Test	

You can now start using the NVR.

