


Action camera 4K - Manual

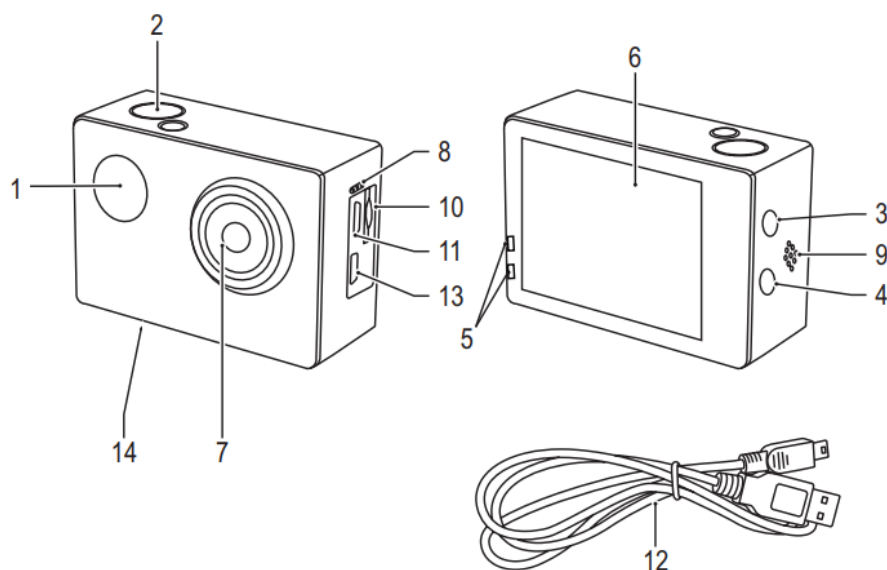

1. On/off button Mode button	<ul style="list-style-type: none"> Press and hold the button for 3 seconds to switch on or off the device. <p>Note: The device switches off automatically when the preset idle time has been reached or the battery is low.</p> <ul style="list-style-type: none"> Press the button to select the required mode.
2. Shutter OK button	<ul style="list-style-type: none"> Photo mode / Photo burst mode / Time lapse mode: Press the button to take a photo. Press and hold the button for 3 seconds to enter or exit the quick-mode menu. Video mode: Press the button to start and stop recording video. Press and hold the button for 3 seconds to take a photo. Playback mode: Press the button to play back photos and videos. Menu mode: Press the button to confirm the selection.
3. Playback button Up button Wi-Fi button	<ul style="list-style-type: none"> Video mode / Photo mode: Press and hold the button to enable or disable Wi-Fi after receiving the Wi-Fi information. Press and hold the button to zoom in.. <p>Note: Wi-Fi is disabled by default. Wi-Fi will be automatically disabled if no Wi-Fi connection is established within 30 seconds.</p> <ul style="list-style-type: none"> Playback mode: Press the button to move up in the menu.
4. Down button	<ul style="list-style-type: none"> Video mode / Photo mode: Press and hold the button to zoom out.. Playback mode: Press the button to move down in the menu.
5. Charging indicator Operation indicator	<ul style="list-style-type: none"> The charging indicator flashes red when the device is being charged. The charging indicator lights red continuously when the device is fully charged. The operation indicator lights blue continuously when the device is switched on. The operation indicator flashes blue when you take a photo or record a video.
6. Display	
7. Lens	
8. Microphone	
9. Speaker	
10. Memory card slot (microSD / TransFlash)	<ul style="list-style-type: none"> Insert a memory card into the memory card slot (storage).
11. USB port (Micro USB)	<ul style="list-style-type: none"> Use the USB port and the USB cable to connect the device to the computer (charging / data transfer).
12. USB cable	<p>Note: For charging, make sure that the device is switched off. For data transfer, make sure that the device is switched on.</p>
13. HDMI input (Micro HDMI)	<ul style="list-style-type: none"> Connect a TV to the HDMI input using an HDMI cable.
14. Battery compartment	<ul style="list-style-type: none"> Open the battery compartment. Insert the battery into the battery compartment. Close the battery compartment.

Charging the battery

- Connect the camera to computer or a to any other 5V USB adapter.
- Charge the battery for 5 hours.

Use

- Insert a memory card into the memory card slot.
- Switch on the device.

Photo mode

- Set the photo mode.
- Press the shutter to take the photo. The photo file is saved to the memory card.

Video mode

- Set the video mode.
- Press the shutter to record the video. The video file is saved to the memory card.

Playback mode

- Set the video mode or the photo mode.
- Play back photos and videos.

Photo burst mode

- Set the photo mode.
- Press the shutter to take three photos in 1 second. The photo files are saved to the memory card.

Time lapse mode

- Set the photo mode.
- Press the shutter to take a series of photos at the set interval. The photo files are saved to the memory card.

Video resolution

Memory card (microSD / TransFlash)	Recording time 4k30	Recording time 2.7k30 / 1080p60	Recording time 1080p30
32 GB	240 min.	120 min.	240 min.
16 GB	120 min.	60 min.	120 min.

Maximum recording time (full battery)					
4k30	2.7k30	1080p60	1080p30	720p120	720p60
90 min.	90 min.	90 min.	90 min.	90 min.	120 min.

Memory cards

The camera is compatible with microSD, microSDHC and microSDXC memory cards with a capacity of 16GB, 32GB and 64GB. You must use memory cards with a Class 10 speed rating. It is recommended to use brand-name memory cards for maximum reliability in high-vibration activities.

Downloading and installing the app

The "CAMLINK 4K CAM" app allows you to control the camera remotely using a smartphone or a tablet.

- Download and install the app from the app store on your mobile device by searching the keywords "CAMLINK 4K CAM".
- Switch on the device.
- Set the required camera mode.
- Enable Wi-Fi.
- Select the device: "CL-AC40". Enter the password: "12345678".
- Open the app.
- Disable Wi-Fi.

Safety



- To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.
- Disconnect the product from the mains and other equipment if a problem should occur.
- Read the manual carefully before use. Keep the manual for future reference.
- Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.
- Do not expose the device to water or moisture.

Cleaning and maintenance

Warning!

- Do not use cleaning solvents or abrasives.
- Do not clean the inside of the device.
- Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
- Clean the outside of the device using a soft, damp cloth.