
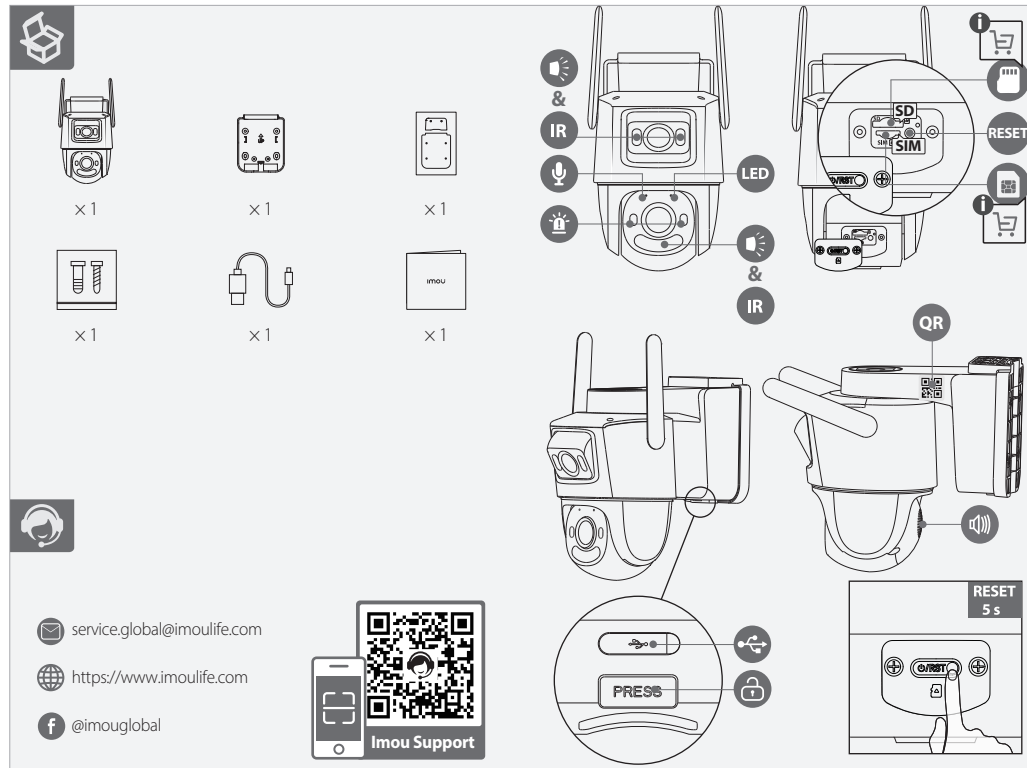


Imou

Quick Start Guide

V1.0.0

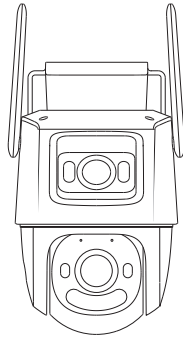

service.global@imoulife.com

https://www.imoulife.com

@imouglobal



TZL00039404

1 Power On the Camera

1 (Optional) **2** **3 s**

2 Get the Imou Life App

Download on the App Store
GET IT ON Google Play

3 Set Up the Camera

1 **2** **3** **4**

4 Install the Camera

1 **2**

3-A

A-1 **A-2** **A-3** **A-4**

3-B

B-1 **B-2** **B-3** **B-4**

3-C

C-1 **C-2**

English

- 1 Power On the Camera (Part 1)**
Your camera supports 4G connectivity and Wi-Fi connectivity. If you decide to use the cellular network, insert the Nano SIM card into the slot before powering on the camera. To turn on the camera, press and hold the Power button for 3s. If the indicator light flashes red twice and then turns off, the camera is out of battery. Please charge it with a 5 VDC 2A power adapter or a solar panel.
- 2 Get the Imou Life App (Part 2)**
Scan the QR code on **part 2** or search for "Imou Life" to download and install the app. Create an account and log in.
- 3 Set Up the Camera (Part 3)**
Scan the QR code on the body of the device or on the cover of this guide with the app, and then follow on-screen instructions to complete the setup (see **part 3**).
- 4 Install the Camera (Part 4)**
Make sure the mounting surface is strong enough to hold three times the weight of the camera. For detailed installation process, please see **part 4**.

LED Status	Device Status	
Green	Flashing slowly	Wi-Fi: Ready to set up the device 4G: No SIM card installed
	Flashing fast	Wi-Fi: Connecting to the router 4G: Connecting to 4G network
	Solid	Booting Network connected successfully
Red & Green	Alternating	Updating firmware
Blue	Flashing slowly	Charging
	Solid	Fully charged

i If you need to reset the camera, press and hold the reset button for 5 s. Release the button until you hear a beep.

